# RANGE HOODS / BUILT-IN


# **ELITE**

**24128-S** • (28"- 490 CFM - Stainless steel)

## TECHNICAL SPECIFICATIONS

- · Stainless steel finish
- 490 CFM
- Noise level: low speed 0.6 to hi 8.0 sones (high speed)
- 3-speed soft-touch controls
- 2 LED bulbs. 5W (incl.)
- 5-layer aluminum filters (incl.)
- 6" round vertical vent exhaust
- Opening required: 10 1/4" x 26 1/2"

# **DIMENSIONS**

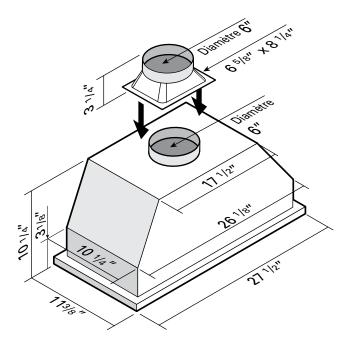

FARO range hoods are warranted (for residential use only) for 1 year on parts and labor, and then for 2 years on parts only. Any problems resulting from improper installation are not covered by the warranty. We recommend having the range hoods installed by a qualified installer.



# NOTICE TO THE INSTALLER OR PURCHASER

As indicated on the box, the hood should be connected and tested prior to installation; if the hood works properly at that time but a problem arises after installation, the problem is not due to the hood but to improper installation somewhere between the hood and the outside yent.

#### **TYPES OF MALFUNCTION:**


- · Noise and vibrations from the hood
- The motor makes a screeching sound and seems to be forcing
- The suction power seems to be approximately the same for all settings.

### **CHECK THE VENT**

### The most common problem is range hood flaps that fail to open:

- $\bullet\,$  Did you remove the protective adhesive strip on the flaps?
- Did you install the duct too tightly over the flaps, preventing them from opening fully?
- Never use screws to attach the duct to the hood outlet.
  Use duct tape instead
- To quickly check whether the valves are operating properly, run the hood for 30 second then turn it off. After 2 or 3 seconds, you should hear the two flaps close one after the other.

Note: For more informations see section " Range hoods - Noise and vibrations issues " on our web site.

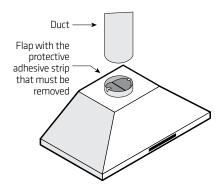



4300 Grande-Allée Blvd, Boisbriand QC, Canada J7H 1M9

450 979-0667

info@lumifaro.com www.lumifaro.com

CLIENT:	
PROJECT:	
DATE:	